 


### Welcome

Congratulations on your purchase of this GoVideo LCD TV + PC Monitor. This Quick Reference Guide will help you get started. Before you begin, make sure the following accessories are included with your LCD TV:

- 1 Remote Control
- 2 AAA Batteries (2)
- 3 Power Cable
- 4 VGA Cable
- 5 RF Cable
- 6 TV Tuner (preinstalled)
- 7 AV Cable
- 8 User's Guide & Registration Card

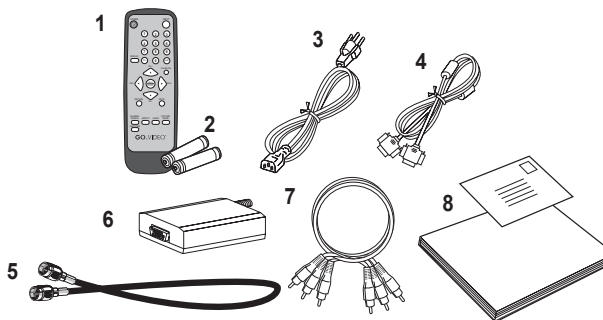


### Step 1 - Insert the Remote Control Batteries

Install the supplied batteries, paying attention to the correct polarities.



### Step 2 - Connect the Power Cable

- 1 Connect the supplied power cable to the AC In jack on the back of the LCD TV.
- 2 Plug the power cable into a standard AC outlet.

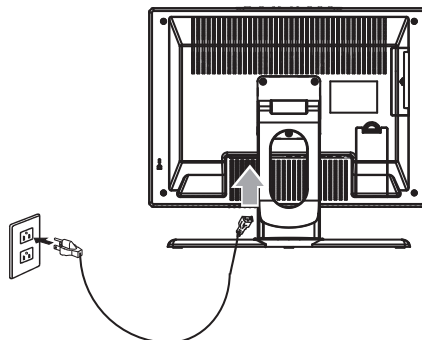


## Step 3 - Connect to an Antenna/Cable

Connect the LCD TV to your antenna or cable/satellite hookup as shown.



*Note: You can also connect the supplied VGA cable from the VGA Out jack on your computer to the VGA In jack on the back of the LCD TV (under the flap door). Press the AUTO button on top of the TV to automatically adjust the PC display to fit the LCD screen; see the User's Guide for details.*

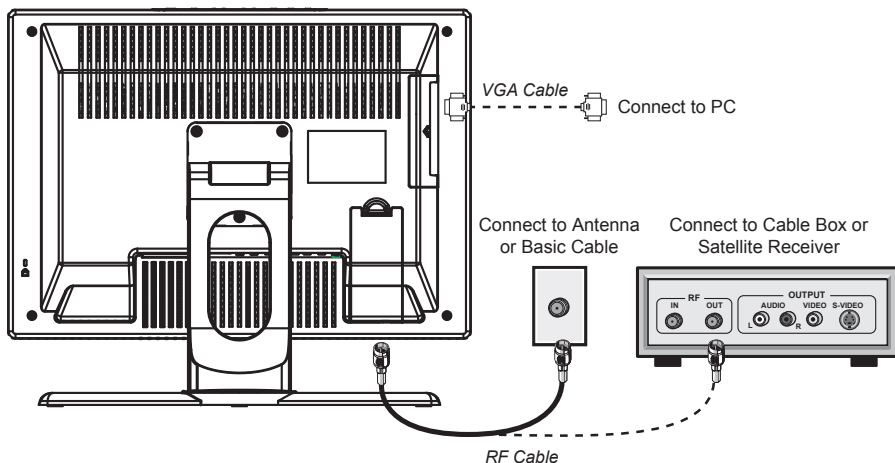

## Step 4 - Turn on the TV

Press **POWER** on the remote control.

- The Power indicator will turn green.
- Press **POWER** again to turn off the TV.

## Step 5 - Search for Channels

Press **SEARCH** on the remote control.

- The LCD TV will automatically search for all available channels.
- To change the tuning band or add/delete channels, see the User's Guide.

## Step 6 - Select Channels/Inputs

You can select up to 69 antenna channels (1-69) or 125 Cable TV channels (1 to 125) on your LCD TV. To select a channel, use the **CH**  $\blacktriangle/\blacktriangledown$  buttons, or enter a 1-, 2- or 3 -digit number as follows:

**To select a 1- or 2-digit channel number (e.g., channel 5)**

- 1 Press the **0** button.
- 2 Press the **5** button.

\* or simply press the **5** button.

**To select a 3-digit channel number (e.g., channel 115)**

Complete the following procedure within 4 seconds.

- 1 Press the **10+** button.
- 2 Press the **1** button.
- 3 Press the **5** button.



*Note: Three-digit channel numbers can only be selected when the Antenna Source is set to Cable; see the User's Guide for details.*

**To select another input**

Press **INPUT** to change the on-screen view to PC, TV, AV (Video In), SV (S-Video In) or YCbCr (Component Video In).

## Step 7 - Adjust the Volume

Press the **VOL+/-** buttons to adjust the volume.

- To mute the sound, press **MUTE**.

## Step 8 - Adjust the Screen Angle

To set the LCD TV to a comfortable viewing angle, tilt the screen up to 5 degrees forward or 20 degrees backward.